

DELTAGRIP DELTAGRIP DG4[™]

System Punch & Die Inserts

The proprietary DeltaGrip® DG4™ system shall only be used on steel deck manufactured by ASC Steel Deck.
1-800-726-2727

INSTRUCTIONS FOR CHANGING PUNCH & DIE INSERTS

- 1. Disconnect the air supply hose from DeltaGrip[®] DG4[™] tool.
- 2. Use hex key to remove flat head cap screws holding die or punch to tool jaw or frame.
- 3. Install new die or punch using new screws provided.
- 4. Make sure die is securely installed on the frame and the punch is installed on the rotating jaw.
- 5. Connect air supply hose. Set air compressor to 10-15psi. Actuate tool to ensure punch and die clears.
- 6. Return to air recommended operating pressure setting and follow operating instructions for usage of the tool.

